



Fraserway RV

Your Vehicle to Adventure™

RV Type:

Van Conversion

THOR DAZZLE 2LB



Instruction Manual

ENGLISH



CANADIAN TRAFFIC RULES AND ROAD SIGNS	4
TRAFFIC RULES	4
ROAD SIGNS	6
CABIN	7
IGNITION.....	7
BATTERY BOOST SWITCH.....	7
AUTOMATIC TRANSMISSION & TOW/HAUL (OVERDRIVE OFF).....	7
CRUISE CONTROL.....	7
PARKING BRAKE (EMERGENCY BRAKE / HAND BRAKE).....	7
POWERED SIDE MIRRORS (HEATED) & WINDOWS	8
UCONNECT 5 ENTERTAINMENT SYSTEM	8
VEHICLE CARE AND MAINTENANCE	8
FUEL	8
ENGINE OIL	8
TIRES	8
VEHICLE SPECIFICATIONS	9
EXTERNAL VIEW.....	10
AWNING	11
ELECTRICAL SYSTEM	11
GENERATOR	13
PROPANE TANK.....	14
WATER SYSTEM	15
TOILET.....	17
WASTEWATER.....	17
WATER HEATER & FURNACE.....	18
AIR CONDITIONING	20
COOKING AREA	21
FRIDGE	21
BEDDING	21
SAFETY EQUIPMENT	22
SMOKE DETECTOR/CARBON MONOXIDE ALARM	22
FIRE EXTINGUISHER.....	22
PROPANE DETECTOR/ALARM.....	22
RETURNING THE VEHICLE	23

Dear Vacationers,

Thank you for choosing us for your motorhome rental while spending your vacation in Canada. We hope you will have a great and relaxing time!

Your FRASERWAY & FOUR SEASONS Team



ROADSIDE ASSISTANCE

If you experience any problems with your RV, please call your **Fraserway & Four Seasons OnRoad Support Service**. Our emergency service is available at **1-866-535-6601** and **1-604-636-3057**. Emergency service hours are:

Monday - Friday	4:00	am	-	9:00	pm	PST
Saturday, Sunday, Holiday	6:00	am	-	6:00	pm	PST

Please note that the time zone for above hours is that of British Columbia and Yukon (Pacific Standard Time or UTC-8, daylight saving time: UTC-7).

Outside these times, your call will be answered by an external call center and assigned to us. We will then contact you as soon as possible during normal business hours.

Fraserway & Four Seasons-OnRoad-Service
1-866-535-6601 and 1-604-636-3057
is available from April 1st until October 31st, 2024!

Necessary information for calling Fraserway & Four Seasons-On Road Service
1-866-535-6601 and 1-604-636-3057

When calling our OnRoad Support Service, please have the following information ready in order for our support team to assist you as efficiently as possible:

Your RENTAL AGREEMENT NUMBER

(This RENTAL AGREEMENT NUMBER can be found in the upper left corner of your rental agreement)

OR

Your UNIT NUMBER

(This UNIT NUMBER can be found on your key tag)

Your exact current location

(Province, city, street/intersection, campsite, pitch number)

AND

Your further travel plans.

(Province, cities for the next 2 to 3 days)

Please describe the problem as detailed as possible!

IMPORTANT: Without the information above we are not able to identify you and might not be able to contact you if you have to leave a message.

Thank you for your assistance!

IN CASE OF AN ACCIDENT

Find out if anybody has been injured whom you have to take care of first.

If there are injuries or larger material damages, call the police and, if necessary, an ambulance. The emergency number to call is 911.

Inform your Fraserway/Four Seasons-OnRoad-Service of the accident.

Exchange all necessary information with the persons involved in the accident.

Record the following information at the scene of the accident, using the accident report form in your Fraserway manual.

Your notes should include names, addresses, phone numbers, insurance names and policy numbers, driver's license numbers and vehicle information incl. license plate numbers. If the driver's name is different from the name of the insured, find out which relationship the persons have, and note the names and addresses of both persons. Also note the description of the vehicles involved incl. model year, brand, type and color. Note the street names, intersections and street numbers. Also helpful are ID numbers of any present police officers and their incident number.

In any case, take pictures of the scene of the accident and of all vehicles involved. If possible, pictures should include all damages to all vehicles involved. If there are any uninvolved witnesses, note their names. This may be very important if the accident ends up in a legal dispute with another party to the accident.

	Phone No.	Monday - Friday	Saturday	Sunday/Holiday
Fraserway / Four Seasons OnRoad Support Service	1-866-535-6601* and 1-604-636-3057 (times as shown above!)			
Police/Ambulance	911	24/7	24/7	24/7
Ford Roadside Assistance	<u>Within Canada:</u> 1-800-665-2006* <u>Within the U.S.:</u> 1-800-241-3673*	24/7	24/7	24/7
Kal Tire 24-Hour Roadside Assistance ¹	<u>Within Canada:</u> 1-888-525-8473* <u>Within the U.S.:</u> Not available in the U.S.	24/7	24/7	24/7

¹ Kal Tire is not available in the provinces of Newfoundland, Labrador, New Brunswick, Prince Edward Island and Nova Scotia. Please note that with * marked phone numbers are toll-free from a Canadian land line. If you call from your cell phone, your phone provider may charge a fee, which we have no influence on.

CANADIAN TRAFFIC RULES AND ROAD SIGNS

TRAFFIC RULES

ALCOHOL AND DRUGS

Permitted blood alcohol levels are mandated by the provinces and territories. Please do not drive under the influence of alcohol and/or drugs!

TRAFFIC LIGHTS



Traffic lights are suspended across the intersection. Left turn arrows indicate that you can safely turn left while the oncoming traffic is still stopped at a red light.

After you have come to a complete stop and made sure the intersection is clear of all vehicles, cyclists and pedestrians, you may turn right despite a red light in the U.S. and Canada except for the island of Montreal in Québec. Exceptions are often limited to certain times and clearly posted as below.



Example on the left: Turning right is prohibited on red.

Example on the right: Turning right is prohibited from Monday to Friday, 7AM - 9AM and 4PM - 6PM (no matter whether there are traffic lights or not).



SEAT BELT

Canadian and U.S. laws require driver and all passengers to be seated with the seat belt fastened when the vehicle is in motion.

SPEED LIMITS

The Speed limit in most urban areas is 50 km/h, and on highways either 80 or 100 km/h, unless otherwise posted.

PEDESTRIANS

Canadian drivers are usually very polite and considerate. Pedestrians have the right of way.

DRIVER'S LICENSES

We require your national license for RV rentals. Foreign licenses are generally accepted in Canada. However, we recommend carrying an international driver's license in addition, unless your original license is issued in English or French.

GPS SYSTEMS AND HEIGHT RESTRICTIONS

Your RV's external dimensions and gross vehicle weight (GVW) are shown on a windshield sticker and in the manual. GPS systems do not provide any information on height restrictions on your planned route. Always check restriction signs for tunnels, overpasses, gas stations, roof constructions, ferries, etc.! A drive-thru at fast food outlets or entry ways to hotels/motels is generally too low for RV's!

As a general rule: the minimum clearance must be 3.70 m or 12 ft. for all of our vehicles.

HOV LANE (HIGH OCCUPANCY VEHICLE LANE)

HOV lanes are for vehicles with two or more people inside. These lanes may only be used by vehicles that carry the minimum required number of people. The HOV lane symbol is a diamond, which is indicated on many HOV signs and above all, on HOV lanes. Example of signs:



Left: HOV lane for buses and vehicles with at least 3 people starts here.

Right: From 5AM to 11PM, this lane is an HOV lane for buses and vehicles with at least 3 people only. During the time from 11PM to 5AM, this lane may also be used by vehicles with fewer people.



<p>Fraserway RV's allowed on HOV lanes:</p> <ul style="list-style-type: none"> • Van Conversion • Truck Camper • C-Small 	<p>Fraserway RV's NOT allowed on HOV lanes:</p> <ul style="list-style-type: none"> • C-Medium, C-Large, C-XLarge • A-Class
--	---

PARKING

Regulations vary from province to province. As a general rule, parking is only permitted in the driving direction of the traffic lane. Parking is not permitted within 6 meters either side of:

- Pedestrian crossings
- Curves or corners
- Entrance/Exit of hotels, theatres, public meeting places, schools, fire departments, playgrounds
- Stop signs
- Fire hydrants
- Traffic control signals

CAUTION:	A yellow curb side generally marks a no-parking zone. If your vehicle uses more payable parking spots, you have to pay for the number of spots used!
-----------------	--

EMERGENCY VEHICLES

If a police car, fire truck or ambulance with flashing lights and/or sirens is approaches (from ahead or the rear), pull over to the right and wait until the vehicles have passed.

If you are stopped by a police car, pull over to the right, remain seated, open the window and wait for the officer to approach. Keep your hands visible on the steering wheel and follow the orders of the officer.

STOP SIGNS



You must always come to a complete stop at the stop line. The driver that arrived at a 4-way stop first has the right-of-way. When two cars arrive at the same time, yield to the car on your right-hand side.

The same rule applies if traffic lights are not working. Canadians are usually disciplined and courteous.

Only one car at a time can cross the intersection.

TOLL BRIDGES

If you are aware that you have crossed a toll bridge on your journey, please inform us upon return of the RV to avoid additional administrative charges. Fraserway RV will be billed directly by the company responsible for collecting the toll fee.



Some crossings will require direct payment on the spot. Please use the truck lane to avoid any height restriction issues.

ACCIDENTS

Most accidents happen while parking the RV. This damage can be easily avoided if a passenger gets out of the vehicle to help the driver to maneuver by giving directions. Never settle or admit any wrongdoing at the accident scene! If needed call the Police. If possible, make notes, take pictures and exchange information with the other party.

Always call our OnRoad-Service and fill in the accident report, which you will find in the "Emergency" section of the instruction manual. The police will not attend to minor accidents without personal injury.

SCHOOL BUSES



Canadian school buses are yellow. They signal to stop all traffic (no passing!) using flashing red lights and/or a swing-out stop sign. It is against the law to pass a stopped school bus. All traffic must come to a halt to ensure children can get on and off the bus safely. Once the signals have been turned off and/or the stop sign has been pulled, the traffic can move again in both directions. Failure to obey this traffic rule is a serious offence. Only if the road is separated by a median, can the oncoming traffic slowly proceed without stopping.

ROAD SIGNS



One way street



Pedestrians are not allowed to cross the street here.



Crossing the road is only permitted at crosswalks.



Do not enter.



Vehicles parked in this zone without a permit will be towed.



Road is closed. The arrow points in the direction of the detour.



From this point, do not change lanes until further notice.



Authorized vehicles only (buses, emergency vehicles, etc.).



No parking on either side of the sign. If the arrow points in one direction only, do not park on the side it points to.



No stopping on either side of the sign.



This road or lane is for bicycle use only.



This road or lane is for buses only.



Private property. No parking.



Turn headlights on and remove sunglasses (common at tunnel entrances).




No parking from 8:30AM to 5:30PM. Parking is allowed during the remaining hours.




No parking except on Sundays and on holidays.



No parking. Loading zone.



Parking on both sides of sign daily 8:30AM - 5:30PM for 2 hours. Parking disks are not used in Canada.



Drivers travelling in opposite directions share the centre lane for left turns.



On multi-lane highways: Sign in combination with exit signs means that a lane ends and becomes the exit lane.



Control signal: Placed over lanes to indicate which ones are open for driving. Here: RED = do not drive in Right Lane.



YELLOW: Move into one with a green arrow. If flashing yellow over all lanes: Slow down and proceed with caution.



Green arrow: Drive in this lane.

CABIN

All vehicles are equipped with an automatic transmission, power steering and power brakes. The Pentastar V6 engine has a capacity of 3.6 litres and an output of up to 276 hp.

IGNITION

Step on the foot brake and press the ignition button ①. The status is shown on the dashboard ②. **ATTENTION:** You have to have the KEY FOB inside the vehicle!



BATTERY BOOST SWITCH


Your motorhome is equipped with a switch that allows you to jump-start the vehicle when its battery is empty. This switch is called Battery Boost switch, and it is located left of the steering wheel (see picture). If your vehicle does not start, long-press the switch during the ignition process, and do not release it until the engine has started. This ensures that the engine draws its starting power from the coach battery.



AUTOMATIC TRANSMISSION & TOW/HAUL (OVERDRIVE OFF)

The gear stick is right of the steering wheel. The instrument cluster displays the current position. Your foot must be on the brake pedal to shift from P (park) to R (reverse) or D (drive). The gear shift ① has the following positions:

- P PARK** to start or turn off the engine. The key can only be pulled in this position.
- R REVERSE** to drive backwards. The rear-view camera is activated automatically.
- N NEUTRAL** position has to be used for towing only!
- D DRIVE** for all normal driving situations with the best fuel economy.

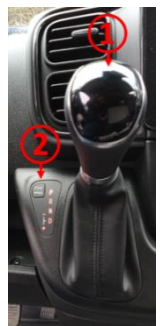

For driving in mountainous terrain and on routes with a lot of speed changes we recommend using the TOW/HAUL function. It prevents the transmission from shifting to the highest gear, gives the vehicle some extra power when going uphill and increases the brake force when going downhill to reduce the risk of overheating brakes. Select the function by pressing the TOW/HAUL ② button.

CRUISE CONTROL

Your RV is equipped with a cruise control. The minimum speed for using it is 50 km/h. We recommend not using the cruise control on mountain roads because this would involve irregular shifting and accelerating, which can result in transmission damage and increased fuel consumption.



- ① Turn cruise control on.
- ② Accelerate with **SET +** until you reached the desired speed. Release the button and speed currently reached will be maintained. As well you can speed up using the foot pedal. As soon as the desired speed is reached briefly press the **SET +** button.
- ③ If you have to brake and then wish to resume the previous speed, press **RES**, and the vehicle automatically accelerates until it reaches that speed.
- ④ Press the **SET -** button to decelerate.
- ⑤ Press the **CAN** button to cancel the set speed.

PARKING BRAKE (EMERGENCY BRAKE / HAND BRAKE)

The parking brake is located left hand side from the steering wheel. Pull to engage the brake. The yellow light will come on. If you want to release it, step on the foot brake and press the parking brake button. The yellow light will disappear.



POWERED SIDE MIRRORS (HEATED) & WINDOWS


Your RV is equipped with powered side mirrors and windows. Here are the different functions:

- ① Neutral position
- ② Position to adjust the driver side mirror
- ③ Position to adjust the passenger side mirror
- ④ Extend side mirrors
- ⑤ Retract side mirrors
- ⑥ Driver side window
- ⑦ Passenger side window
- ⑧ Lock doors



UCONNECT 5 ENTERTAINMENT SYSTEM

This system includes your radio/entertainment features as well as an inbuild navigation system. If it is not working, you will find a little reset hole ① under the screen. Just push and hold for 5 seconds with a paper clip or a ballpoint pen tip.

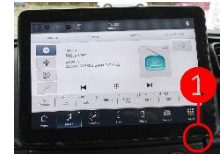

VEHICLE CARE AND MAINTENANCE

FUEL

The gasoline operated engine requires regular unleaded gas (Octane 87). Whenever possible, please fill up your vehicle at brand gas stations, such as Esso, Shell, Chevron, Husky, Petro Canada, Irving, etc. The fuel available at independent gas stations is often of a lower quality and can cause problems with clogged fuel pumps, etc., which may result in lengthy and expensive repairs.

ENGINE OIL

The engine oil level and the levels of all other fluids must be checked in regular intervals. Please check every 1,500 km when the engine is cold. Please use **SAE OW-20 Oil** and keep all oil receipts. Present them to us when you return the vehicle, and we will be glad to reimburse you.

CAUTION:	The renter is liable for ANY damage resulting from miss-fuelling or using incorrect engine oil. If you have any questions, doubts or concerns, please call our OnRoad-Service.
-----------------	--

OIL CHANGE INDICATOR LIGHT ILLUMINATES

As per manufacturer recommendation, we change our vehicles' oil every 16,000 km. The oil change light will illuminate regularly but does not really indicate a required oil change. The mileage of the last oil change is indicated on a sticker on your windshield. If an oil change is really necessary, please call our OnRoad-Service to obtain information on authorized auto repair shops. Please keep all oil receipts and present them to us when you return the vehicle, and we will be glad to reimburse you.

TIRES

TIRE CHECK

Please check the tire pressures regularly when tires are cold. The recommended tire pressure is indicated on a sticker inside the driver-side door frame. The wheel nuts should be visually checked every time you leave a campground.

CHANGING THE TIRES

Tires should only be changed by authorized personnel of the FORD Road-Side Assistance program or of Kal Tire 24-Hour Service. Please contact our OnRoad-Service whenever a tire change is required. These numbers are listed in the "Emergency" appendix. Please only attempt to change a wheel if there is no way to contact us for assistance. Changing a wheel is at your own risk. The wheel nuts of the changed wheel must be checked after 100 kms or sooner and retightened if necessary. Failure to do so could cause serious accidents.

WARNING:	The renter is liable for damages resulting from improper tire change or non-performed checks.
-----------------	---

VEHICLE SPECIFICATIONS

Motorhome class	Van Conversion – THOR Dazzle 2LB
Chassis	Dodge Ram
Engine	Pentastar V6
Roof air conditioner	yes
Microwave	no
Convection oven	yes
Oven	no
3-point-seat belts at dinette	no
Bathroom vent	yes
TV	no
DVD Player	no
Rear dual tires	no
Generator	yes
Side slide-out	no
Rear slide-out	no
Sleeps	2
Seat belts	4
Fuel type	gas
Engine oil type	SAE-OW 20
Bumpers	Steel
Locking lug nuts	Not available
Number of axles	2
Spare tire	No
Tire size	Front- and rear tires: LT225/75R16
Tire pressure	The tire pressure is indicated on the tires and on a sticker inside the driver-side door frame.
Fire extinguisher	The fire extinguisher is located next to the entrance door.
Sewer hose	The sewer hose is located in a tube on the driver side.


Dimensions & weight	Metric system	Imperial system
Height (incl. all superstructures)	275 cm	9'5"
Width	229 cm	7'6"
Length	640 cm	21'0"
Gross vehicle weight (GVW - i.e., weight incl. full fuel, propane, wastewater and water tanks, maximum number of persons allowed, and luggage)	4,241 kg	9,350 lbs

Fill capacity	Metric system	Imperial system
Freshwater tank	102 litres	27 gallons
Gray water tank	49 litres	13 gallons
Black water tank	51 litres	14 gallons
Fuel tank (gasoline)	90 litres	24 gallons
Propane Tank	22 litres	6 gallons
Total weight of all tanks when full	314 litres	84 gallons


Interior specifications

Beds	Included	Metric system	Imperial system
Overcab bed	No	N/A	N/A
Rear bed	Yes	187 cm x 203 cm	74" x 80"
Dinette bed	No	N/A	N/A
Pull-out sofa bed	No	N/A	N/A
Interior room height		190 cm	6'3"

EXTERNAL VIEW

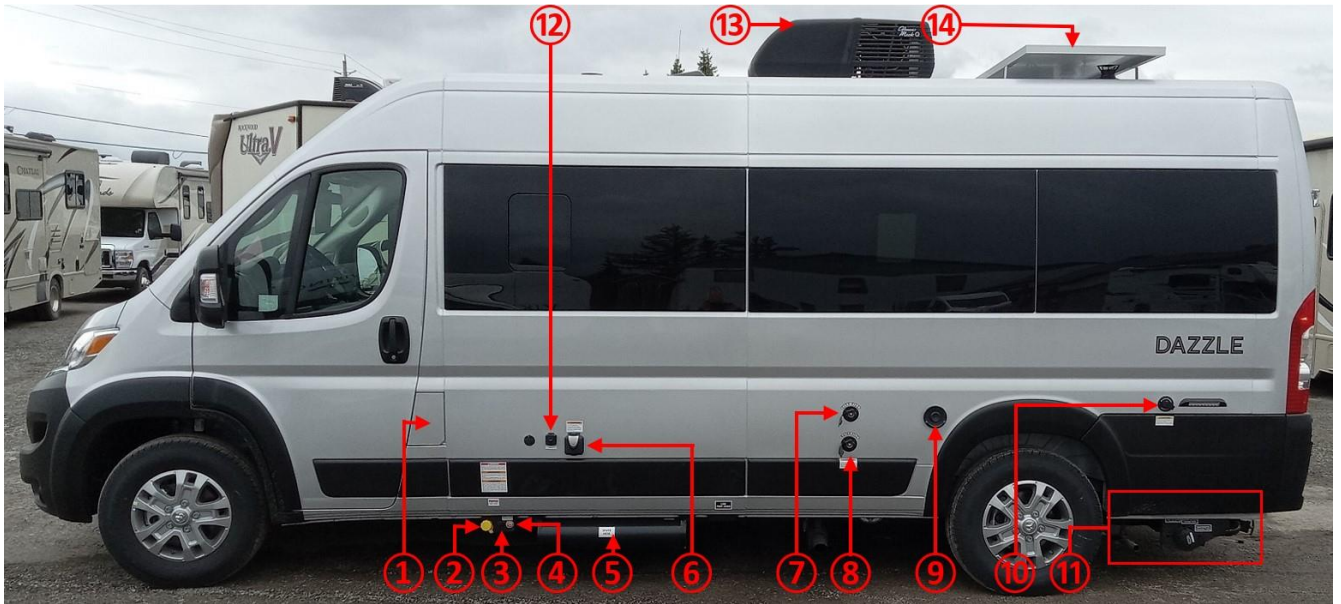

1. Fuel tank	8. Freshwater tank/potable water	15. Awning adjustment
2. Propane filling adapter	9. Water heater + furnace exhaust	16. Backup camera
3. Propane emergency shut off	10. Sewer flusher (please don't use!)	17. Bike rack
4. Propane release valve	11. Sewer system (connection, black + gray water)	18. Back door
5. Sewer hose storage	12. Cable-TV connection	Behind this door you will find
6. 110V power connection	13. Roof AC	a Power outlet 110V b Power outlet 12V
7. City water connection	14. Solar panel	c Water pump d light switches
		e Outside shower connection with shower

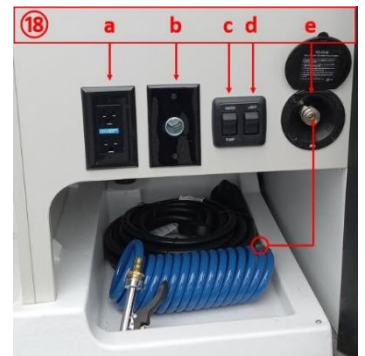


AWNING

Our vehicles are equipped with an awning. Depending on the vehicle model, one of the control boards described below is available to operate the awning.


BMPPRO TOUCHSCREEN

Touch the MOTOR CONTROL BUTTON ② on the BMPPRO – RV MINI HOMESCREEN ①. This will lead you to the MOTOR CONTROL SCREEN ③. Here you can use the AWNING ④ part to RETRACT ⑤ and EXTEND ⑥ the awning.

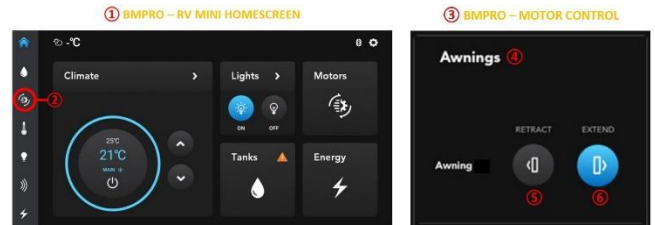

BMP DISPLAY

Touch the PAGE NAVIGATION button ① to get to the MOTORS screen ①. Press the SELECTION button ② until AWNING 1 ② is highlighted. Use EXTEND ③ and RETRACT ④ to bring the awning out and in.

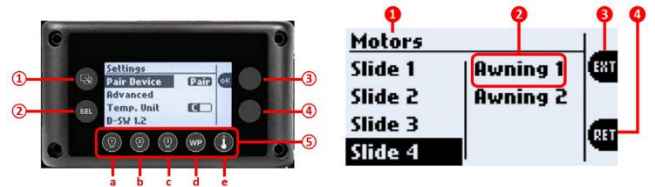

IMPORTANT:

- Never use the awning in bad weather or in strong winds!
- The awning must be retracted if you leave the RV unattended for an extended period of time.
- Before extending the awning make sure that sufficient space is available.
- Do not manoeuvre your vehicle with the awning extended, and always be sure the awning is retracted when leaving the campground!
- If the awning will not extend or retract simply turn off the main power switch of the house batteries, wait 10 seconds and turn it back on again. This will reset the electric system and the awning may operate again.

CAUTION: Any damage resulting from improper operation of the awning is the renter's sole responsibility.

ELECTRICAL SYSTEM

12V DUAL BATTERY SYSTEM

The living area of your RV is equipped with a 12V dual battery system, the so-called coach battery. The vehicle battery (provides power to the engine and driver's cabin) and coach batteries (providing power to the living area of the motorhome) are both charged by the alternator while you are driving but discharge independently from each other.

BATTERY SWITCH POSITION



The main switch for turning the coach battery on and off is located directly next to the side entrance door at floor level. This switch allows you to turn the 12V battery, providing power to the motorhome's living area, on and off. If none of the 12V appliances in the motorhome is receiving power, it is possible that this switch was accidentally turned off. Please check if this is the case and turn it back on if required (ON position).

12V appliances: Inside & outside lighting, water heater & pump, fan heater, awning, bathroom vent, fridge.

HOOK-UP TO THE POWER GRID (110V)



Your RV is equipped with a power cable. It is needed to hook up the vehicle to the 110V power grid of the campground. The plug is a 30 AMP plug. If your campsite only provides 15 AMP, use the provided adapter. All electrical appliances of the motorhome and the hook up at the campsite should be turned off before you connect your RV. We recommend using the 110V hook-up whenever possible in order to preserve and recharge your coach batteries. The coach batteries will recharge while the vehicle is connected to the electrical hook-up. After connecting the power cable ② to the RV 110V connection ①, tighten the black ring to prevent accidental unplugging.

CAUTION:	Please do not overload the coach batteries. They cannot sufficiently recharge if they lose too much voltage. Once the charge has reached a very low level, the alternator can no longer recharge them simply by driving. In that case they must be recharged using the exterior power cable (110V) on the campground for at least 8 hours. We are not responsible for any cost or lost time due to overloaded coach batteries. Complete drainage of batteries can damage them and the charging system. The charging system and the batteries must be checked, and potentially replaced, by a technician.
-----------------	--

CONVERTER

A power converter automatically converts 110V power to 12V power for use by 12V appliances. The converter is located in the **POWER LOAD CENTER (PLC)**, formally known as FUSE BOX. No manual operation is required as it is fully automatic.


FUSES ①, BREAKERS ② & POWER LOAD CENTER (FUSEBOX) PLC

The fuses and breakers for the internal 12V or 110V power circuit are located in the POWER LOAD CENTER, formally known as fuse box. You will find it in the bed frame on the passenger side, at floor level.



12V PLUG-IN (BLADE-TYPE) FUSES ①

Those fuses protect inside and outside lighting, water heater, water pump, heater fan, fans, bathroom vent, fridge and awning. If an appliance doesn't work, a fuse might be blown. When the wire in the middle of the fuse is broken (see picture) you will need change the fuse. For your convenience, we provide spare fuses. You can find them in a kitchen drawer.

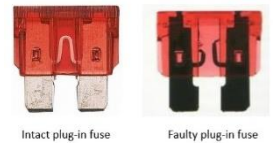

110V BREAKERS ②

The 110V fuses protect the power flow to the microwave and the roof air conditioner. Check the breaker if one appliance stopped working. If so, move the breaker all the way into the OFF position and then turn it back on.



POWER OUTLETS & RESET BUTTON



If you hook up to a 110V power grid or use the generator, the living area is supplied with power, and the integrated power outlets can be used. The power outlets are not powered when you are travelling and the only power source available is the coach battery. If your power outlets are not powered despite a 110V connection, please check if the reset switch, located in one of your internal 110V power outlets, has been tripped. To do this, press the reset button ① and check whether your power outlets are supplied with power again.

INVERTER SWITCH

There is an inverter switch above the entrance door. If this is turned on, the inverter will convert 12V power from the coach batteries to 110V just for the nearest power outlet to the door under the bed. **We recommend not to turn on this function.** If you use it, please turn it off again as soon you don't need this special power outlet anymore. Otherwise, **it will drain your coach batteries very quickly.**



CONVECTION OVEN

For use of the convection oven, a minimum of 110V/15AMP hook-up is needed. If a 15AMP connection is used and, in addition to the convection oven, other 110V appliances are turned on, there is a risk of a circuit overload, which might cause the main fuse (110V breaker) to trip. If you use multiple 110V appliances, we recommend using a 30AMP connection.

ROOF AIR CONDITIONER

For use of the roof air conditioner, a 110V/30AMP hook-up is required.

Troubleshooting: Power Supply

Problem	Cause/Solution
No power in the power outlets	<ul style="list-style-type: none"> - Unit is not connected to 110V - 110V power source at campground is not working - Broken power cord - Tripped breaker - Reset button tripped
No power at all in the living area or only when the engine is running	<ul style="list-style-type: none"> - Main power switch is OFF (page 11, battery switch position) - Coach battery level is too low and the batteries need to be charged by driving or connection to 110V
Smell of rotten eggs	Please open all windows and doors, turn off the propane, and check if there is a leak in the propane system. If this is not the case, your coach batteries may have been overloaded. A propane leak must be repaired in a repair shop, and an overheated battery must be replaced. Please contact our OnRoad-Service, and we will make an appointment for you.

GENERATOR

Your motorhome is equipped with an integrated generator providing your vehicle with 110V power (AC) when it is not hooked up to the power grid on the campground. In addition, the coach batteries will be charged slowly. The generator is operated by the fuel. The related tank must be more than ¼ full for the generator to start. The generator turns off automatically as soon as the level falls below ¼.

We recommend not to use the generator while driving!

GENERATOR USE WITH THE BMPPRO TOUCHSCREEN

Turning the Generator ON

1. Turn off all electrical devices.
2. Choose the ENERGY CENTER SWITCH (2) on the BMPPRO –HOMESCREEN (1). The BMPPRO – ENERGY CENTER DISPLAY will appear.
3. Press START GENERATOR (4) and hold the button until the generator starts.
4. As soon as the microwave beeps (30 – 40 seconds) the power circuit is closed and you can use the electrical devices




Turning the Generator OFF

1. Turn off all electronic devices
2. Press STOP GENERATOR (3) and hold the button until the generator stops.

GENERATOR USE WITH THE BMP DISPLAY

1. Turn off all electrical devices.
2. Touch the PAGE NAVIGATION button (1) to get to the ENERGY screen (1).
3. Press the SELECTION button (2) until GENERATOR (2) is highlighted.
4. Use ON (3) and OFF (4) to start and stop the generator.
5. A generator warning (1) will appear if the generator fault LED is actively blinking!

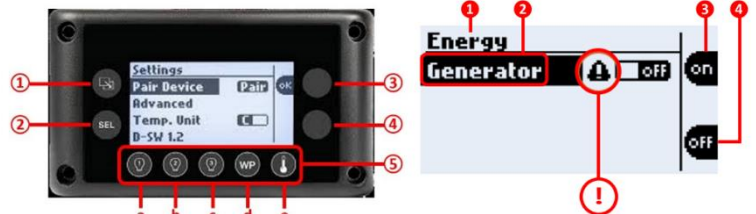

Troubleshooting: Generator

Problem	Cause/Solution
Generator does not start	<ul style="list-style-type: none"> - The fuel tank level is below ¼. - Start button pressed too short. It need to be pressed for approx. 10 seconds (sometimes longer) - Weak coach battery. Start the engine and then the generator. - Blown or burnt fuse. Please check the fuses in the fuse box and on the generator, and replace plug-in fuses if required
Fuse is tripped	The circuit is overloaded. If too many appliances are used simultaneously, the fuse may be tripped while the generator is already running. Please turn off the appliances, check the 110V breaker in the fuse box (turn them in the OFF position and in the ON position again as sometimes it is not visible that they have tripped), and restart the generator.

SAFETY INSTRUCTIONS:

1. Do not use the generator when the motorhome is parked in high grass or in scrubby terrain because the heat of the exhaust fumes may cause a fire in dry conditions.
2. Do not touch the generator while it is running or shortly after it has been turned off to avoid burns.

SOLAR SYSTEM


Your RV is equipped with a solar system on the roof, which recharges the coach battery when exposed to sunlight. The solar system is automated and does not require manual operation.

PROPANE TANK

Stove top burners, water heater and furnace are propane operated. Therefore, your RV is equipped with an integrated propane tank, which is located underneath the vehicle. For the capacity of the propane tank, please see the "Vehicle Specifications" chapter. The current level can be seen if you touch ENERGY CENTER SWITCH ② on the **BMPRO –HOMESCREEN** ①. The **BMPRO – ENERGY CENTER DISPLAY** will appear and you can read the level of PROPANE ③, FUEL ④ and Power ⑤.



On the **BMP DISPLAY** touch the PAGE NAVIGATION button ① to get to the TANKS screen ①. Then you will find the LPG/Propane level.

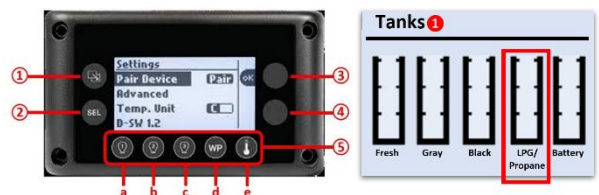

The propane tank does not need to be full when you return the vehicle. However, if you run out of propane while you are travelling, please refill the tank at your own cost. Propane can be refilled at many gas stations and some private campgrounds. The service personnel will do the refilling for you. For safety reasons, self-service is prohibited for propane.

CAUTION:	<p>If used properly, propane is very safe fuel. Nevertheless, all our vehicles are equipped with a propane detector, which triggers an alarm when an elevated concentration of propane is detected in the air. Propane is highly flammable and explosive. Therefore, please be sure to strictly follow the operating instructions for all propane-operated devices in the vehicle.</p> <p>If you notice a typical smell of sulfur or rotten eggs, or if the propane alarm sounds, extinguish all open flames immediately, do not operate any electrical switches, and please close the main valve of the propane tank. Then immediately open all windows and doors. Once the alarm stops, make sure that all switches on the propane cooker are properly turned off, i.e. are in the OFF position.</p> <p>In such cases, avoid open fire under all circumstances!</p>
-----------------	--

CAUTION:	Prior to any refuelling, propane refilling or ferry rides, the main valve of the propane tank MUST be closed. All propane-operated appliances, such as the fridge, stove and heater, must first be turned off.
-----------------	---

Troubleshooting: Propane

Problem	Cause/Solution
Propane-operated appliances have no propane.	<ul style="list-style-type: none"> - The propane valve on the tank is closed. Please open the valve. - The propane tank is empty. Please refill.
No propane supply after the main valve has been turned open following refilling or a ferry passage.	Please open the valves very slowly because otherwise the safety shut-off valve, may be triggered and prevents the propane from flowing to the end devices. Allow 1 to 2 minutes for the propane to reach the devices. If the shut-off valve has been triggered, please close the propane tank valve (turn lock). Then open the propane tank valve slowly.
Propane alarm is triggered or there is a smell of sulfur or rotten eggs inside the RV.	Immediately close the main valve on the propane tank. There may be a leak in the system. Open doors and windows so that any propane can escape to the outside. Avoid open fire under any circumstances until the smell has dissipated, and do not operate any electrical switches. The system must be inspected by a technician. If there is no problem with the propane system, the smell may indicate a coach battery overload or short circuit. If this is the case, you should be able to see a white powder (sulphuric acid) on or around the battery. Please do NOT touch it, because the acid is corrosive! Please call our OnRoad-Service so that we can arrange for an appointment with a technician.

WATER SYSTEM

FRESHWATER TANK (POTABLE WATER/TANK FILL)



Your RV is equipped with an integrated fresh water tank. For the tank capacities, please see the "Vehicle Specifications" chapter.

Filling the Freshwater Tank

The water tank must be refilled regularly from the outside using a water hose. The tank inlet is labelled "WATER Fill" ①.

CAUTION:	<p>Never empty the freshwater tank entirely because this may damage the water pump, and you as the renter are liable for such damages. We take no responsibility for any expenses and/or time loss due to damages resulting from an insufficient amount of water in the water tank.</p> <p>The freshwater tank is not automatically refilled by hooking up to the city water connection. The freshwater tank must be refilled separately through the "Potable Water" or "Tank Fill" hook-up.</p>
-----------------	--

Troubleshooting: Freshwater Tank

Problem	Cause/Solution
Freshwater tank remains empty despite refilling.	Be sure not to confuse the freshwater tank inlet with the city water connection (CITY FILL) or the sewer flush (SAN-I-FLUSH). The freshwater tank does not automatically refill through the city water connection but must be refilled separately.

WATER PUMP

If you use the integrated water tank for freshwater supply, you need to turn on the water pump. Choose the TANKS SCREEN ② from the **BMPRO HOMESCREEN** ①. The **WATER PUMP** ③ switch is on the upper left-hand side. Please turn off the pump while you are driving, if you do not use it for an extended time, and when you are using the city water connection because it may overheat and you as the renter are liable for any resulting damages.



On the **BMP DISPLAY** just touch the WP button **d** to turn on or off the water pump.




Troubleshooting: Water Pump

Problem	Cause/Solution
Water pump does not start.	<ol style="list-style-type: none"> 1. The 12 Volt plug-in fuse has burnt. Please check the 12V plug-in fuses and replace where necessary. 2. The battery voltage is too low. Please check the coach battery level on the battery and tank indicator panel, and if necessary, recharge the battery. 3. The pump is faulty. Please call our OnRoad-Service.
Constant "snoring" sound from the pump.	<ol style="list-style-type: none"> 1. Water tank is empty. Please fill it. 2. Lose connection in the water system. Please call our OnRoad-Service.

CITY WATER CONNECTION

You can connect your RV directly to the fresh water system of the campground using the provided water hose. Please note the following steps:

1. Please ask the campground staff for the available water pressure. If the pressure is 40 PSI or higher you have to use the provided water pressure regulator ③!
2. Connect one end of the water hose to your city water connection ① at the driver side of the RV.
3. Connect the other end of your water hose ② to the water pressure regulator and the regulator to the water tap of the camp site when the water pressure is 40 PSI or higher. If the pressure is lower than 40 PSI, connect the other end of the hose directly ⑤ to the tap ④.
4. Please open the water tap of the camp site ④ half a turn only to avoid excess pressure on the water lines of the motorhome.
5. Open all water taps of your RV slowly to ventilate the pipes.

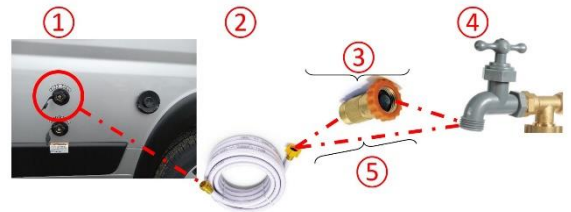

SHOWER

The shower has a button (picture on the right) on the shower head itself. It can be pushed to stop the water flow from the shower head and helps save water while having a shower.



Troubleshooting: Shower

Problem	Cause/Solution
The water in the shower does not run off.	<ol style="list-style-type: none"> 1. The gray water tank is full. Please empty it as soon as possible. 2. The shower drain is clogged up. Please remove any residue blocking the drain.



PLEASE DO NOT TOUCH THIS LITTLE LEVER (SHOWER MIZER) BEHIND THE TOILET! ①
 The knob should always point to the 9 o'clock position in order to prevent the water pump from running continuously, which could result in damage to the pump. If turned on accidentally, please shift back to default position. Thank you!

OUTSIDE SHOWER

For outside shower use, ensure that either the RV is hooked up to the campground's water connection or the water pump is turned on. In the latter case, the water in the freshwater tank is used.



TOILET

CHEMICALS

To ensure that the toilet can be used without the risk of clogging, it is necessary to add special chemicals to the black water tank. These chemicals deodorize and decompose at the same time. They are available in liquid, powder and tablet form and should be added every time the black water tank has been. After you have added the chemicals to the black water tank pour two buckets of water into the toilet or flush at least four times to help the chemicals dissolve and work.

CAUTION:	Only use biodegradable or 1-layered toilet paper. Do NOT dispose of diapers, hygiene articles, Q-tips, etc. in the toilet UNDER ANY CIRCUMSTANCES! By avoiding this you help prevent clogging, repairs and time loss at your expense.
-----------------	---


Troubleshooting: Toilet

Problem	Cause/Solution
The toilet is clogged up.	<ul style="list-style-type: none"> - The black water tank might be full. Please empty it at the dump station of your campground or a Sani dump. - Pour some hot water into the toilet. It will flow to the wastewater tank and should help dissolve solid waste quickly. It only works if no objects are causing the problem.

WASTEWATER

Your motorhome is equipped with two separate wastewater tanks. The gray water tank collects the wastewater from the sinks and shower. The wastewater from the toilet goes into the black tank. Please do not save water when flushing the toilet to prevent tank clogging.

Information on the capacity of the various tanks of your vehicle can be found in the chapter "Vehicle data". To check the level of the tanks, choose the TANKS SCREEN ICON ② on the **BMPRO HOMESCREEN** ①. The TANKS SCREEN ② will appear and you can see the level of the FRESH WATER TANK ③, GRAY TANK ④ and BLACK TANK ⑤.

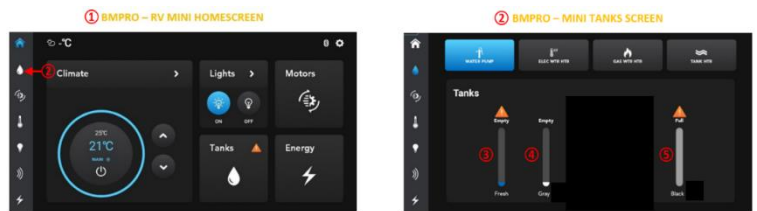

On the **BMP DISPLAY** touch the PAGE NAVIGATION button ① to get to the TANKS screen ①. Then you will find the levels of the FRESH ②, GREY ③ and BLACK ④ tanks.

EMPTYING THE WASTEWATER TANKS

1. Unscrew the sealing flap ⑤.
2. Screw on sewer hose using bayonet joint.
3. Put sewer hose in dump pit.
4. Open valves:
 - a) First black water ②; sewer from the tank is coming through the black pipe ①.
 - b) Second gray water ④; waste water from sinks and shower is coming through the gray pipe ③.



CAUTION:	<ul style="list-style-type: none"> - NEVER leave the vehicle unattended while draining the wastewater tank. - Do not leave the drain valves permanently open, even if you have a permanent sewer connection, because this may lead to crusting and clogging in the black water tank. The renter is liable for any damage resulting from such failure. - The wastewater tanks must be emptied at designated disposal stations only. These DUMPING, SANI or DISPOSAL stations can be found at many campgrounds and at some gas stations and rest stations along main roads and highways. The wastewater tanks should be emptied regularly, i.e., every two or three days.
-----------------	--

Troubleshooting: Wastewater Tanks

Problem	Cause/Solution
The RV is hooked up to the city water connection and water comes out of the toilet and/or the ventilation pipe on the roof.	You accidentally connected the water hose to the sewer flush. Turn off the water and connect the hose to the "City Water" hook-up.
The wastewater tanks are indicated to be full although they have just been emptied.	<ul style="list-style-type: none"> - Paper, grease or food gets stuck on the sensors inside the tank causing false indications. - There is no clog if you can hear the water run off through the sewer hose.

WATER HEATER & FURNACE

The furnace and water heater are controlled by the display on the back wall of your RV.




1. Display
2. Status line
3. Menu line (top)
4. Menu line (bottom)
5. Power supply display 110V
6. Time switch display
7. Settings/Values
8. Rotary push button
9. Back button

- A rotary push button (8) is used to select menu items in the menu lines (3 + 4) and to adjust settings.
- Information is shown on a backlit display (1).
- The Back button (9) is used to go back to a previous menu.



Rotary push button

The rotary push button (8) is used to select and change set points and parameters; it is then tapped to save the values. Selected menu items flash.

	<p>Turn clockwise</p> <ul style="list-style-type: none"> - The menu is scrolled through from left to right - Increase values (+)
	<p>Turn counterclockwise</p> <ul style="list-style-type: none"> - The menu is scrolled through from right to left - Reduce values (-)
	<p>Tap</p> <ul style="list-style-type: none"> - Save a selected value - Select a menu item, go to the setting level <p>Press (3 seconds)</p> <ul style="list-style-type: none"> - Main switching function – control panel on/off

Back button

Press the Back button (9) to go back to a previous menu and cancel settings. This means that the previous values remain unchanged.

Control panel on/off

- Press the rotary push button (8) for more than 3 seconds.
- Previously set values and operating parameters are active again when the panel is switched on.
- Because of internal time lags for the heating, the switching-off process can take a few minutes.

Select setting level

- Tap the rotary push button (8). The display shows the setting level. The first icon flashes.



ROOM TEMPERATURE



The furnace is switched on when this icon flashes. It flashes until the desired room temperature is reached.

- Use the rotary push button (8) to select the icon in the menu line (3).
- Tap the button to go to the setting level.
- Select the desired temperature with the rotary push button (8).
- Tap the rotary push button (8) to confirm the value

Adjustable temperature range:

Temperature display	Range	Increments
Fahrenheit	40 – 86 °F	1 °F
Celsius	5 – 30 °C	1 °C

The temperature can be changed quickly using the rotary push button.

HOT WATER LEVEL



Your RV is equipped with a water heater, which supplies hot water to the water connections of the water basin and sink.

Refilling

The water heater cannot be refilled manually but refills automatically using the cold water available in the internal freshwater tank or via city water connection.

- Use the rotary push button to select the icon in the menu line.
- Tap the button to go to the setting level.
- Select the desired hot water level with the rotary push button.
- Tap the rotary push button to confirm the value.


a	b	c	d	is on.
boost hot eco	boost hot eco	boost hot eco	boost hot eco	ore 104 °F (40 °C)
				ore 140 °F (60 °C)
				heated quickly (boiler priority) for up to water temperature is then kept at the out 144 °F (62 °C) for two subsequent heating cycles.

The boost icon flashes until the desired water temperature is reached. The water temperature 104 °F (40 °C) can be kept in "Heating and hot water mode" for a limited time only (heating priority)

ENERGY MODE

- Use the rotary push button to select the icon in the menu line (3).
- Tap the button to go to the setting level.
- Select the desired energy mode with the rotary push button.
- Tap the rotary push button to confirm the value.

Symbol	Energy mode
a	LP gas
b	Electricity 850 W+ Gas
c	Electricity 1700 W+ Gas
d	Electricity 850 W
e	Electricity 1700 W

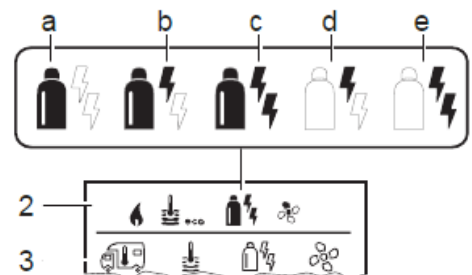

Special features in mixed mode

Interruption in the 120 VAC power supply:

- The furnace automatically switches to gas mode. When the 120 VAC power supply is restored, the furnace automatically switches back to mixed mode.

Fault in combustion process (e.g. fuel shortage):


- The furnace automatically switches to electric mode. If the furnace is to run in mixed mode again, the cause of the malfunction must be remedied and the furnace has to be started again by going to the menu item "Malfunction" and pressing the rotary push button.

Special features in electricity mode

- When the 120 VAC power supply is interrupted and the 12 VDC supply is on, an error code is displayed on the control panel.
- When the 120 VAC power supply is reconnected, the furnace will restart automatically with the previous settings without any user interaction. The error code on the control panel will disappear.

FAN SPEED

- Use the rotary push button to select the icon in the menu line (3).
- Tap the button to go to the setting level.
- Select the desired fan speed with the rotary push button.
- Confirm with the rotary push button.

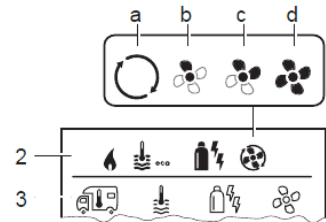

Icon	Operating mode	Description
-	OFF	Fan is switched off. (Can be selected only if furnace is switched off)
a	VENT*	Circulating air if furnace is switched off. Speed can be selected in 10 increments.
b	ECO	Low fan speed
c	HIGH**	High fan speed
d	BOOST	Fast room heating. Available if the difference between the selected and the current room temperature is > 18 °F (10 °C).

* Can increase wear and tear on the motor, depending on how often it is used.

** HIGH fan speed uses more electricity, is louder, and increases wear and tear on the motor.

When the furnace is switched on (room temperature, hot water level set), the fan speed selected in the previous heating process is shown in the status line (2). The factory setting is ECO.



WARNING:


This icon indicates that an operating parameter has reached an undefined status. In this case, the furnace continues to operate. When the operating parameter returns to the set range, this icon extinguishes automatically.

AIR CONDITIONING


Your RV is equipped with an air conditioning system for the living area.

CAUTION:	To be able to operate the air conditioning, the RV must be hooked up to a 110V/30AMP power grid, or the generator must be turned on.
-----------------	--

The air conditioning is in the ceiling of the RV. Touch on the CLIMATE ICON ② on the **BMPRO HOMESCREEN** ①. The CLIMATE SCREEN appears. Now you can choose the desired TEMPERATURE ⑤ by using the UP ④ and DOWN ③ arrows.

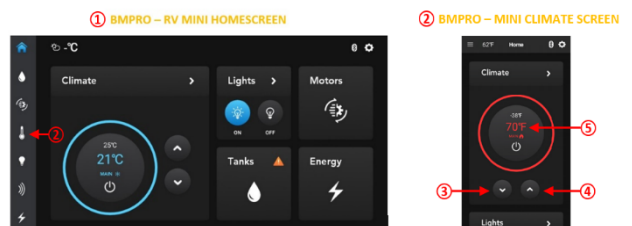


On the **BMP DISPLAY** touch the MAIN A/C button **a** to get to the AC screen **1**. ROOM **2** shows the current room temperature. The desired temperature SET **3** is set using the UP **6** and DOWN **7** buttons. These buttons are also used to select the MODE **4** and speed of the AC-FAN **5**.

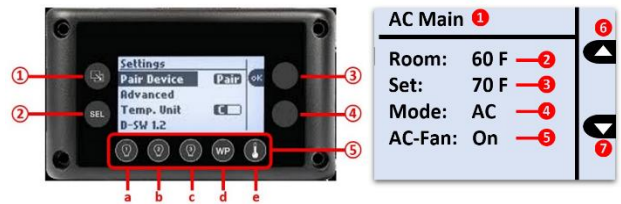

COOKING AREA

STOVE


The stove is propane-operated. The burners have no safety valves! This means that propane is flowing when an element is turned up but has not been lit. Please always make sure that the flames of the burners are not extinguished by a draft of air or the like and propane escapes unnoticed. To ignite the propane, push the knob of the corresponding burner **1** or **2** in and slightly turn it counter-clockwise. You can now hear the propane flowing. Keep the knob pushed in this position and ignite the escaping gas on the burner using the ignition button **3** or a lighter. To turn a burner off, turn the corresponding knob back to OFF. Be sure that the knob clicks locked and can no longer be turned.

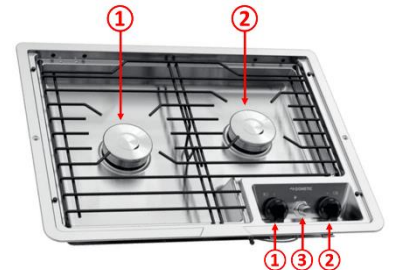

CONVECTION OVEN

The motorhome is equipped with a convection oven. It only works if you are hooked up to a power grid.

CONTROLS AT A GLANCE

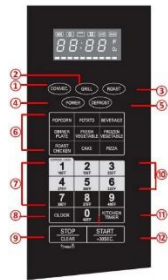

- ① Convection
- ② Grill
- ③ Roast
- ④ Power
- ⑤ Defrost
- ⑥ Auto Menu:
Popcorn/Potato/Beverage
Dinner Plate/ Fresh Vegetable/Frozen Vegetable
- Convection Menu:
Roast Chicken/Cake/Pizza
- ⑦ Number Keys/Convection Temperature Keys
- ⑧ Clock Setting
- ⑨ Stop/Clear
- ⑩ Express Cook
- ⑪ Kitchen Timer
- ⑫ Start/+30SEC.

FRIDGE



The VC is equipped with a 12V powered fridge.

CAUTION: To avoid discharging house batteries, the vehicle should be connected to a campsite's power supply as often as possible.

BEDDING



Verander de bank in een bed:

Zo ziet de bank eruit gezien van de achterkant van de camper.

Zo ziet het bed er 's avonds uit, gezien van de voorkant van de camper



SAFETY EQUIPMENT

SMOKE DETECTOR/CARBON MONOXIDE ALARM



Each RV is equipped with a combined carbon monoxide alarm/smoke detector. This alarm sounds if an excess carbon monoxide concentration (CO) is measured in the air.

CO is a colourless and odourless gas, which can escape if, for example, there is a malfunction in the burner system. Sources of carbon monoxide include open flames (stove, oven, furnaces). Therefore, always make sure that the RV is well-ventilated while cooking appliances are in use, i.e., please open a skylight and/or window.

If the alarm device repeatedly emits individual beeps in certain intervals without triggering an alarm, this indicates that the batteries have reached the end of their life and need to be replaced. Please replace them to ensure that the smoke detector continues to function. Please keep all receipts for such expenses and present them upon return of the RV for reimbursement.

FIRE EXTINGUISHER

A fire extinguisher is part of the safety equipment in each of our motorhomes. Please refer to the "Vehicle Specifications" chapter for its location.

PROPANE DETECTOR/ALARM



Each RV is equipped with a propane detector, which is always located near the floor. The alarm goes off whenever an increased propane emission (e.g. from the stove or oven) is detected. Please do not to place any objects near the propane detector to avoid false alarms.

Please note that the propane alarm is connected to the coach battery, and if the level of batteries is too low, the alarm emits a beep every 30 seconds. In that case, the coach battery must be recharged to ensure continued safety in the vehicle.

In the event of an alarm:

In the event of an alarm, please turn off the propane supply on the propane tank, open all windows and doors, and wait outside of the RV until the alarm stops. Once the alarm has stopped, please check if the control knobs on the stove and oven are off and no propane escapes unnoticed.

RETURNING THE VEHICLE

TIME

Please return the vehicle READY FOR INSPECTION to your rental station at the latest time stated in the rental agreement to ensure it can be properly maintained and cleaned for our next customer. Allow sufficient time for packing. The next renter will appreciate it.

TANKS

When returning the vehicle, the black and grey water tanks must be EMPTY, and the fuel tank must be FULL.

FINAL CLEANING

Please return the vehicle in good condition and with the interior reasonably clean. We take pride in the condition our vehicles, investing a lot of time on their maintenance and cleaning.

NO SMOKING

Smoking is not allowed in our vehicles! Violators will be fined according to our "Terms & Conditions".

EXTRA CHARGES

If the vehicle is returned late without prior approval by our rental station, an hourly late fee is charged according to our "Terms & Conditions". We will charge fees for emptying the waste water tanks, refuelling the fuel tank and cleaning of the vehicle's interior according to our "Terms & Conditions".

CAUTION:	Renters are fully liable for any traffic violations committed during your rental. Please pay your ticket upon your return at the rental station. For payment delays, a processing fee is charged in addition to the actual ticket amount. The fees are listed in our "Terms & Conditions". Thank you for your understanding.
-----------------	--

If you have any questions or concerns, please don't hesitate to contact us. Your rental team would like to thank you and wish you a pleasant time with our Recreational Vehicle.

Your FRASERWAY & FOUR SEASONS Team



Disclaimers:

Features, components and appliances depicted in this manual may differ from your rental motorhome depending on the model year. All features, components, appliances, materials, instructions, and guidance depicted and/or described in the manual and documentation are as accurate as possible at the time of creation and initially published but may not be accurate as a result of your rental motorhome having been assembled on a date after the manual or document was produced and initially published. Fraserway RV LP reserves the right to make changes, substitutions and improvements to its products without prior notification. This manual is for demonstrative purposes only. If you are still unsure on how to properly operate any appliance or feature addressed by the manual or documentation, please consult with your local Fraserway RV rental branch directly. This manual is ©2024 Fraserway RV LP, and all related marks, logos, and model names are owned by Adventurer Manufacturing LP and Fraserway RV LP, Inc. or its licensor(s). No portion of this manual may be copied, altered, published, displayed, broadcast, or otherwise used without the express permission of Fraserway RV LP, Inc. All rights reserved.

Version: APR172024